



798 Clearlake Road Suite 2 Cooca, FL 32922  
(321) 637-7552

# **Maintenance Instructions**

## **Flume Filter**



Step 1: Reach into flume filter and remove inner basket



Step 2. Properly dispose debris.



Step 3. Replace basket with open end facing the inflow. \*\*

\*\*If unit contains hydrocarbon boom(s) inspect for oil saturation. If boom(s) appears dark and oil saturated replace boom before returning internal screen into frame. Replacement booms can be obtained from Suntree Technologies (321) 637-7552